


KINGSMITH WalkingPad Treadmill

X25+

USER MANUAL

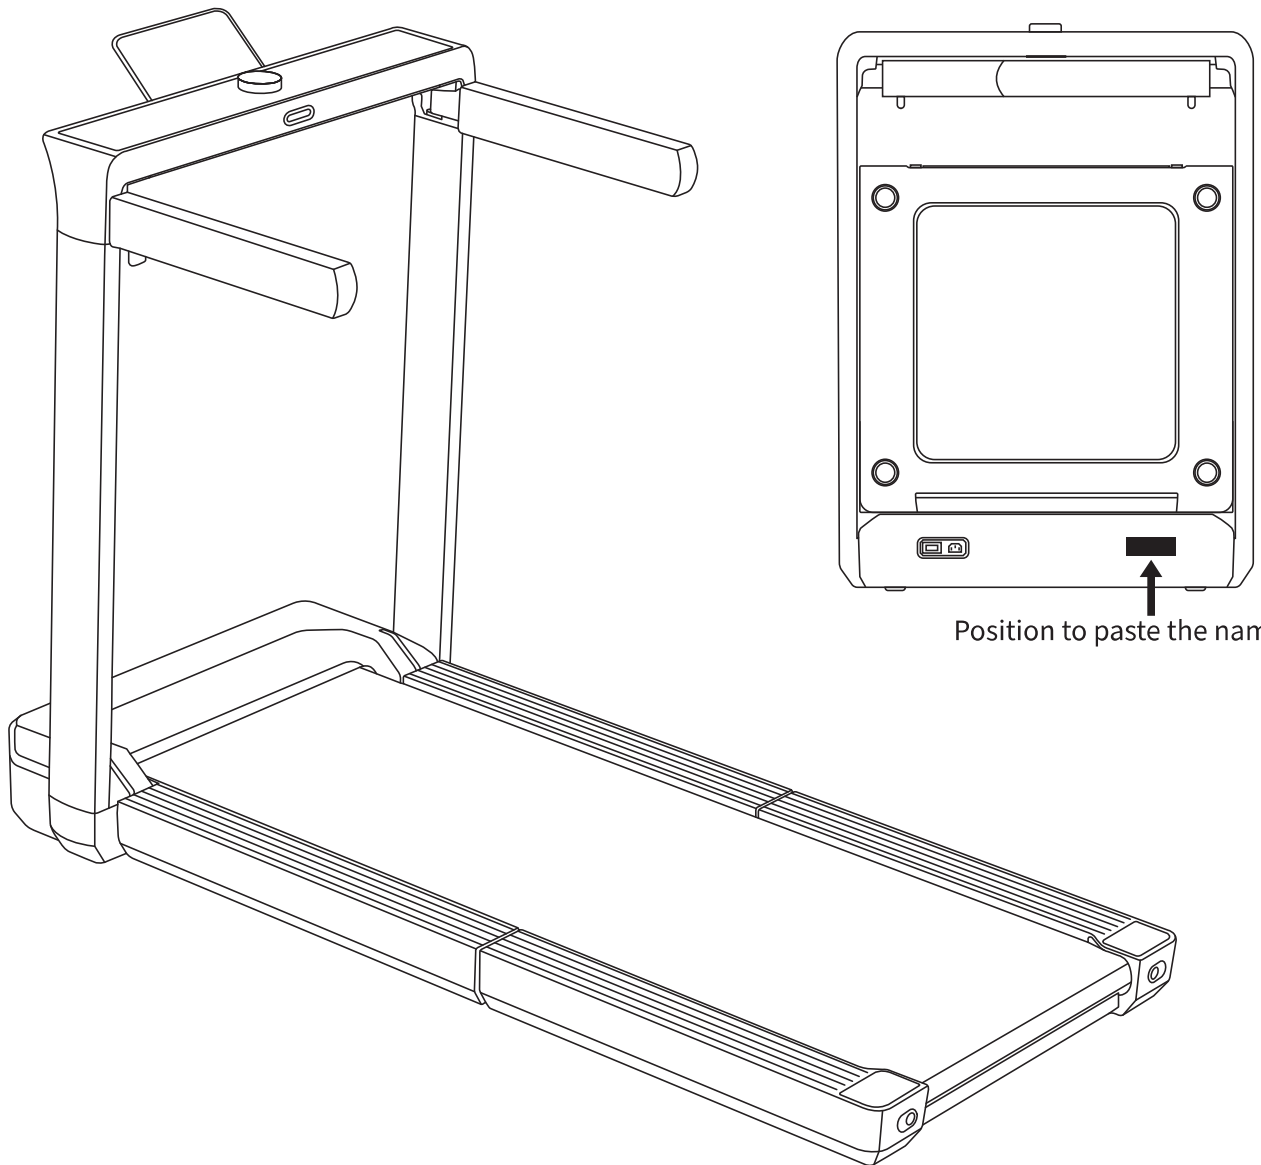

Position to paste the nameplate

WARNING

Please be careful to avoid slipping and injury when using.
Do not let children approach or use this equipment.
The treadmill has an innovative design with multiple folding. Mind your hands and fingers when folding/unfolding it.
Please read the user manual carefully before using the product. Keep it properly for future reference.



Scan the QR code for
more languages



Scan the QR code
for app download

Safety Precautions

Thank you for choosing KINGSMITH WalkingPad Treadmill (hereinafter referred to as "the equipment", "the product", etc). To ensure that you fully understand and use this product correctly, please read the following instructions carefully before use.

The equipment is intended for residential use.

DANGER - TO REDUCE THE RISK OF ELECTRICAL SHOCK:

Always unplug the equipment from the electrical outlet immediately after using and before cleaning.

WARNING - This equipment can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the equipment in a safe way and understand the hazards involved. Children shall not play with the equipment. Cleaning and user maintenance shall not be made by children without supervision. This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the equipment by a person responsible for their safety. Children should be supervised to ensure that they do not play with the equipment.

WARNING - Store the equipment flat. Keep young children away from this machine at all times. Contact with the moving surface may result in severe friction burns.

WARNING - TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- 1) Equipment should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under or near a blanket or pillow. Excessive heat can occur and cause fire, electric shock, or injury to persons.
- 3) The equipment is only to be used by healthy and able-bodied adults. Close supervision is necessary when this equipment is used by, on, or near children, invalids, or disabled persons.
- 4) The equipment is intended for consumer and residential use only. Do not use it in a commercial or light-commercial setting or outdoors or for medical treatment purpose.
- 5) Never operate this equipment if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact customer service for examination and repair. Do not use attachments not recommended by the manufacturer.
- 6) Do not carry this equipment by the supply cord or use the cord as a handle.
- 7) Keep the cord away from heated sources.
- 8) Never drop or insert any object into any opening.
- 9) Connect this equipment to a properly grounded outlet only.
- 10) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 11) To disconnect, turn all controls to the off position, then remove the plug from the outlet.
- 12) If you feel uncomfortable, please stop exercising immediately and consult a doctor to avoid damage to your health.
- 13) Ensure there is a distance of at least 2000 mm × 1000 mm behind the equipment and a distance of at least 600 mm on both sides.
- 14) Wear appropriate athletic clothing to use the equipment and exercise according to your own condition. Do not exercise barefoot or in socks only.
- 15) Do not wear loose or dangling clothing while using the product.
- 16) Do not stand or step on the head of the equipment.
- 17) Do not use this equipment with, near or around pets.
- 18) Do not walk backward on the equipment to ensure stability.
- 19) The elderly, children, and pregnant women Must use this device with caution. Please consult a doctor and obtain relevant guidance before using this equipment.
- 20) Do not fold this equipment when the power is on. Otherwise, it may affect the service life of the product and lead to other safety hazards. Do not start the equipment when it is folded.
- 21) Store the equipment as instructed in the manual for safety.
- 22) Do not get on or off this equipment when the equipment is running to prevent accidents.
- 23) Do not exceed the maximum specified user weight.
- 24) Do not expose this equipment to direct sunlight. Keep it in a cool and dry place.
- 25) Do not use the equipment in a humid environment or rain as it is not water-resistant.

-
- 26) Do not exceed the recommended usage time. Allow the equipment to cool down for 20 minutes before restarting.
 - 27) For optimal performance and stability, use the equipment on a level solid surface and ensure there are no obstructions underneath it.
 - 28) The value of the A-weighted emission sound pressure level at the trainer's ear is around 57dB(A). Noise emission under load is higher than without load.
 - 29) Injuries to health may result from incorrect or excessive training.
 - 30) **WARNING!** Heart rate monitoring systems may be inaccurate. Over exercising may result in serious injury or death. If you feel faint stop exercising immediately.
 - 31) In an emergency, remove the safety key to stop the equipment. Hold onto the handles and step on the anti-slip side strips until the equipment comes to a complete stop.
 - 32) Our company is not liable for any personal injuries or property losses caused by improper use of this product. We reserve the right to update, revise, or terminate the user manual and related instructions without prior notice.

WARNING:


To maintain the safety level of this equipment, it must be examined regularly for damage and wear. This includes components such as belt and motor. If you discover any defective components, replace them immediately. Do not use the equipment until repairs are complete. Pay special attention to components that are most susceptible to wear, such as the belt and motor. These components should be inspected more frequently and replaced when necessary.

Contents

1. Product Introduction	03
2. Operation and Adjustment	05
3. Care and Maintenance	17
4. Troubleshooting	18
5. Exercise Tips	19
6. Trademark and Legal Declaration	20
7. Regulatory Compliance Information	20

1. Product Introduction

Unpack the product and check the contents inside. If there is any damage or missing parts, please contact the seller.

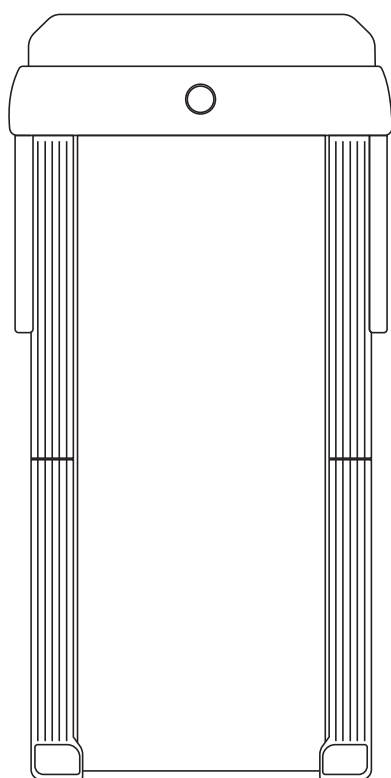

Treadmill


01 Tech Specs

Product name	Motorized Treadmill	Belt size	51.9×19.6 inches
Model	WP500B4		1320 mm×500 mm
Speed range	1-10 mph 1-16 km/h	Unfolded size	60.8×30.4×41.5 inches
Max user weight	136 kg / 300 lb		1545 mm×773 mm×1056 mm
Net weight	54 kg / 119 lb	Folded size	9.6×30.4×41.5 inches
Rated voltage	220-240 V~		246 mm×773 mm×1056 mm
Rated frequency	50/60 Hz	Class	HC
Rated power	1125 W	Age range	14 years and above

02 Packing List



Power cord



Phone holder



Safety key



Allen key



Silicone oil



User manual

Radio Frequency and Radio Transmission Power


RF Specification	Working Frequency	Maximum Output Power
Bluetooth	2400-2483.5 MHz	0.71 dBm (EIRP)

Energy Efficiency


This product has standby mode and off mode.

Power consumption	off mode: 0 W standby mode: 0.4 W
Time to enter the Condition	standby mode: 20 min

03 Part Names

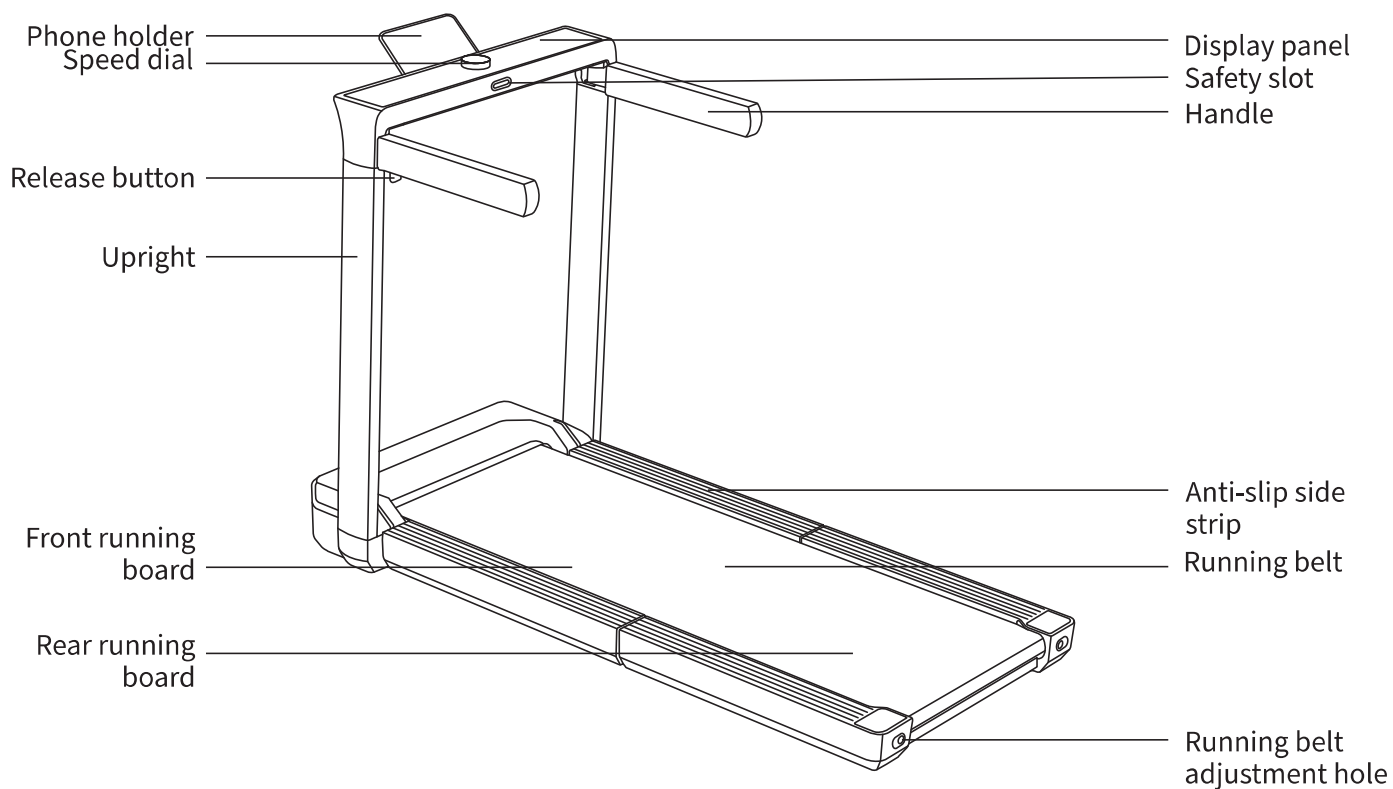

Unfolded state

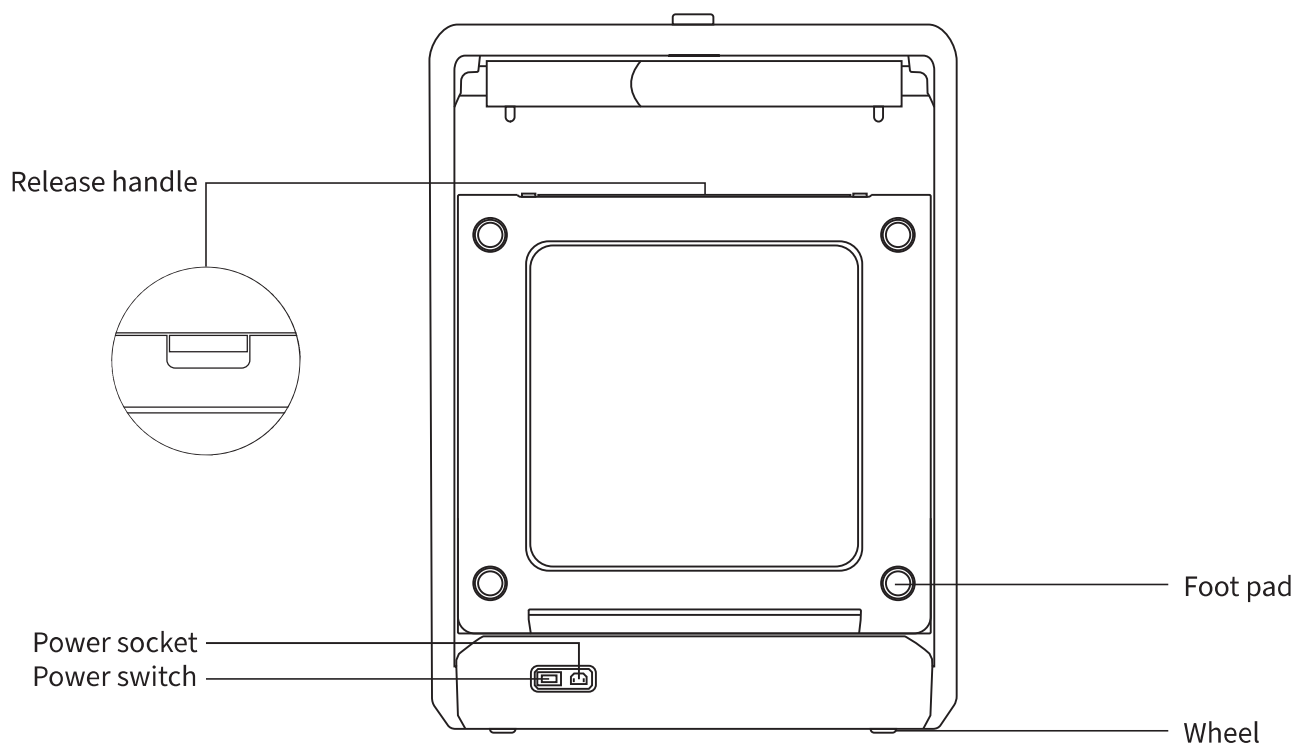


Folded state

2. Operation and Adjustment

01 How to move the Treadmill

Before moving the equipment, ensure the switch is turned off, the power cord is unplugged and securely stored, the handles and running board are completely folded.

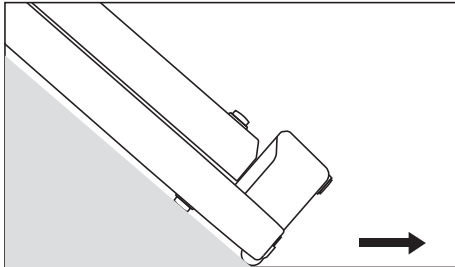


- ① Lift the equipment by the area below the display panel and move it to your desired location.

CAUTION:

- Avoid touching the running belt to prevent damage or injury.
- Avoid moving the equipment on uneven floor to ensure stability.
- Maintain a proper angle between the equipment and floor to avoid friction when moving.


02 How to unfold the treadmill

Before unfolding the equipment, make sure the free area behind the equipment is at least 2000 mm × 1000 mm, and the free area on each side is at least 600 mm.

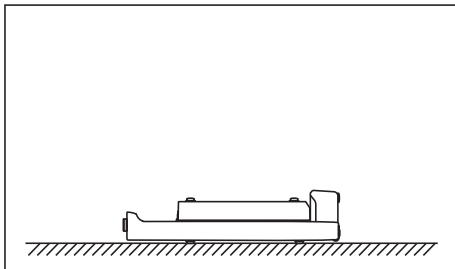


- ① Place the equipment on a solid level surface.

CAUTION: Avoid thick carpet or mats, as it may make the equipment less stable.

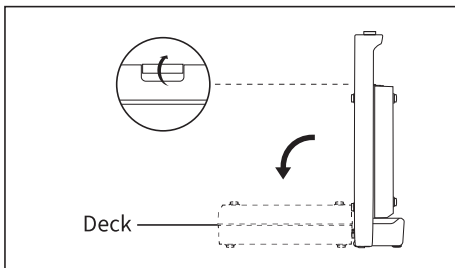


- ② Unfold the deck by holding the release handle, pushing it forward, lifting it up and towards you.

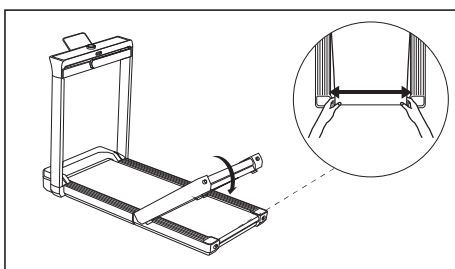

- ③ Unfold the rear running board. Center the running belt by manually adjusting its front and back ends. Press down the rear running board to make it completely flat. If it is not level with the floor, rotate the foot pad for adjustment.

CAUTION:


- The rear running board can be pressed down hard by hand without damaging the equipment.
- You may hear a loud suction-like sound when unfolding the running board and feel a slight gap when stepping on the running belt. These are normal and will disappear with continued use.

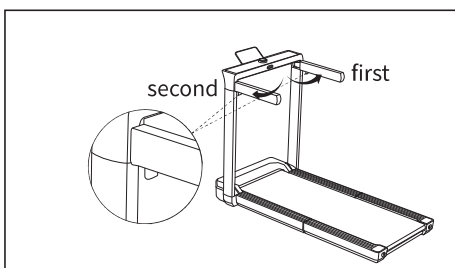

- ④ Unfold the right handle by pressing and holding the right release button first, followed by the left handle.

CAUTION: The right handle must be unfolded prior to unfolding the left handle.

03 How to install the phone holder

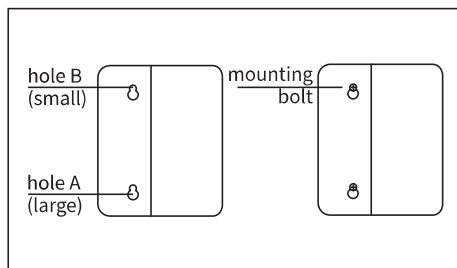


- ① Align hole A (large) with the mounting bolt and slide the phone holder into hole B (small) until it clicks into place.


CAUTION: To remove the phone holder, slide it from hole B (small) to hole A (large).

04 How to plug in the power cord

This product must be grounded when in use and our equipment meets the grounding requirement. If there is a malfunction or damage, grounding can provide a path with the least resistance for the electric current, reducing the risk of electric shock.

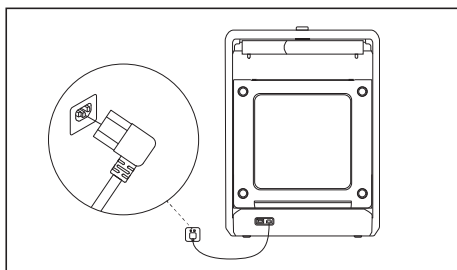

- ① Insert the equipment end of the power cord into the power socket on the product.

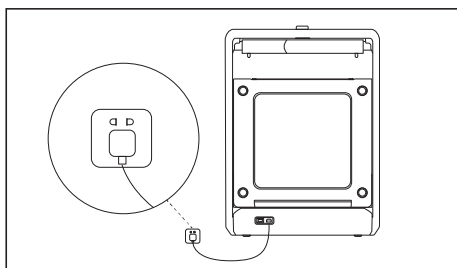


- ② Insert the wall outlet end of the power cord into the power outlet.

CAUTION:

- Do not modify the plug provided with the product. If the plug is not suitable for the outlet, have a qualified electrician install a suitable outlet.
- If the power cord is damaged, it must be replaced with the power cord designated by the manufacturer.


05 How to turn on the power

If the equipment is exposed to a cold environment, please let it return to room temperature before turning on the power switch. Otherwise, the equipment components may be damaged.

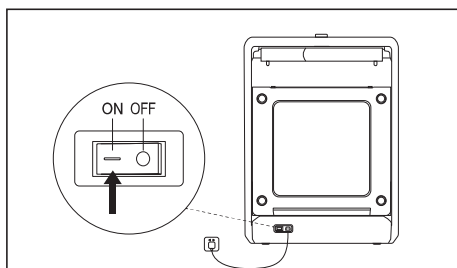


- ① Turn on the power switch until you hear a beep and see the panel lights up.

06 How to use the safety key

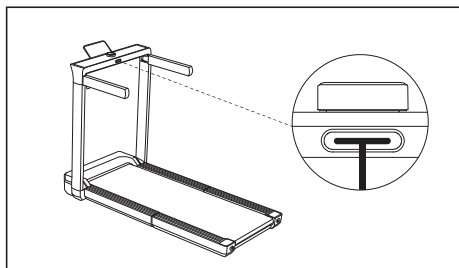


- ① Insert the safety key into the safety slot to start the treadmill.

CAUTION: For safety reasons, the equipment cannot start without the safety key.

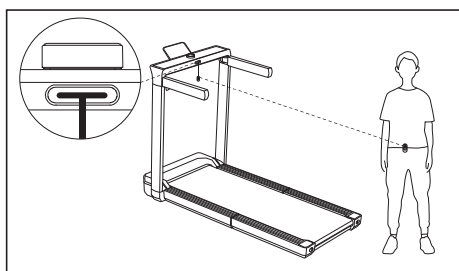

- ② Clip the lanyard of the safety key to your clothes at your waist.

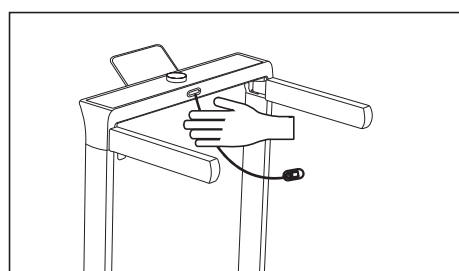

- ③ In an emergency, remove the safety key to stop the equipment. Hold onto the handrail and step on the anti-slip side strips until the equipment comes to a complete stop.



Warning:

- Exercise caution when removing the safety key, as the equipment will stop suddenly.
- Remove safety key when not in use, and store out of reach of children.

07 How to use the display panel

① Basic Operation


Power On: Turn on the switch. The display panel will display time, speed, distance and calories.

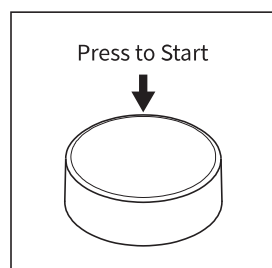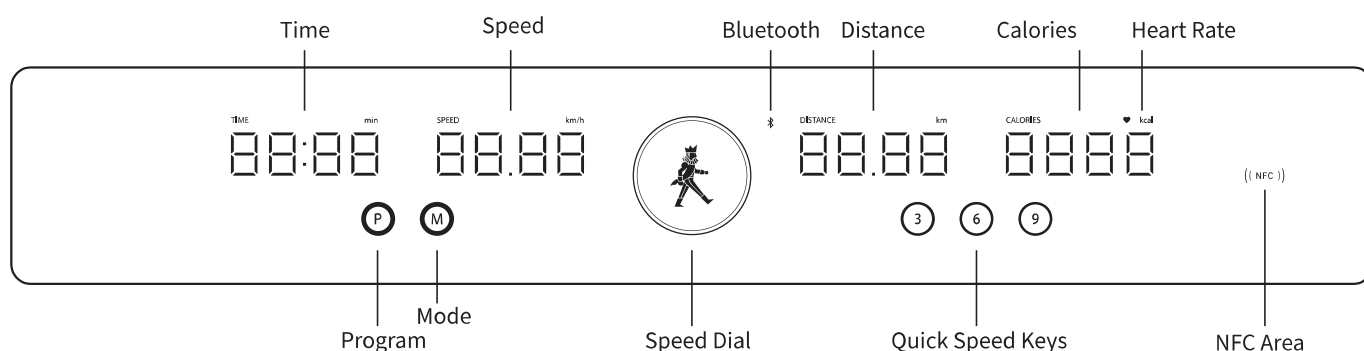


Run: Step on the running belt and press the SPEED DIAL. Following a 3-second countdown, the equipment will start moving at 1 km/h.

Caution:


- For safety, the equipment will automatically pause after 60 seconds without use. This "No-Load Stop" feature is off by default but can be turned on in the KS Fit app (Motion > Settings).
- Make sure the safety key is inserted. Otherwise, the equipment will not move.

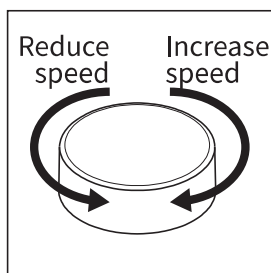


Speed Up/Down: Rotate the SPEED DIAL clockwise to increase speed or counterclockwise to reduce speed while the equipment is moving.

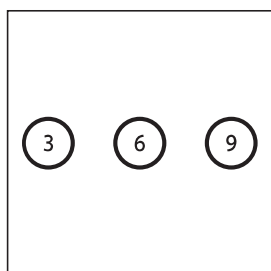

Quick Speed Keys: Press to set your speed instantly to 3, 6, or 9 km/h.
Warning: Beginners should not run at 9 km/h due to increased risk of injuries.
Caution: In imperial system, 3/6/9 indicates speeds of 3, 6, and 9 mph respectively.

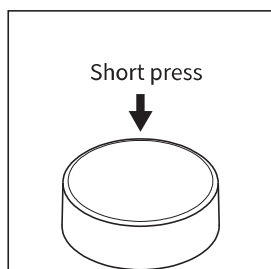

Pause Workout: Press the SPEED DIAL while the treadmill is moving. The equipment will slow down and display "Stop". When the equipment stops, "Stop" disappears.
Caution: To resume workout, press the SPEED DIAL again and the workout data will continue to accumulate.

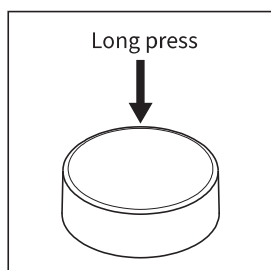

End Workout: Press the SPEED DIAL for 2 seconds or wait for 10 minutes after pausing workout, the workout data will be reset.


Sleep: Press and hold the SPEED DIAL for 2 seconds or let the equipment idle for 10 minutes after ending workout, the display panel will turn off.

Caution: To wake the equipment from Sleep mode, press any button on the display panel.




((NFC))


Metric/Imperial Unit Switch: Restart the equipment, connect the KS Fit app, tap "ME" > "Settings" > "Unit Settings", choose "Metric" or "Imperial", and restart the equipment again.

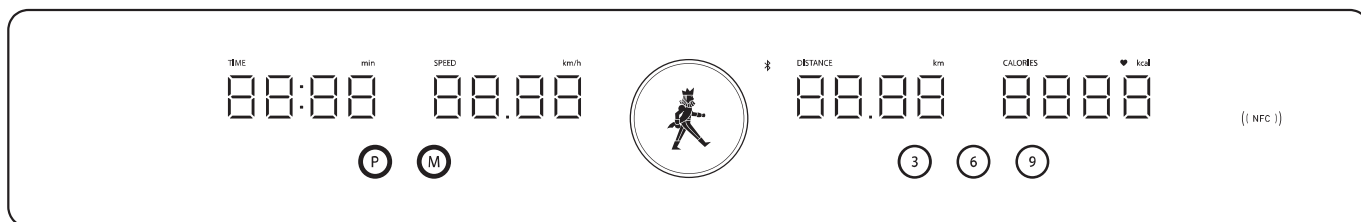


App Connection: The Bluetooth light flashes when the equipment is not connected to the app, and stays solid when connected.

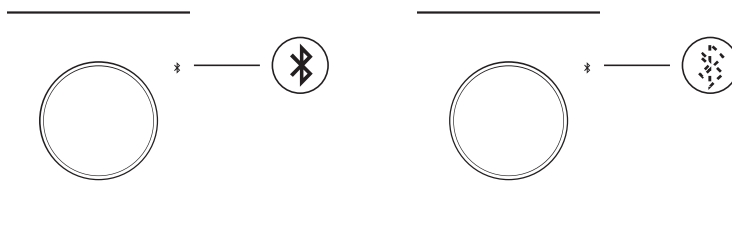

Safety Key: Without safety key inserted, the panel will display "SAFE". Insert the safety key to clear the "SAFE" message and use the equipment.

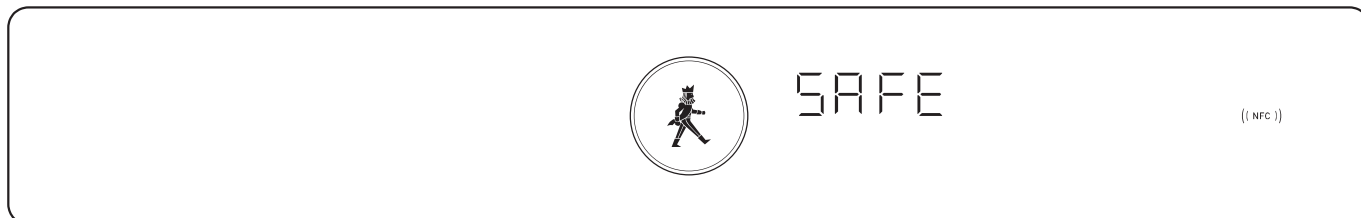


Child Lock: With child lock enabled in the KS Fit app, the equipment will not start and the panel will display "LOC". Disable the child lock in the app to clear the "LOC" message and use the equipment.

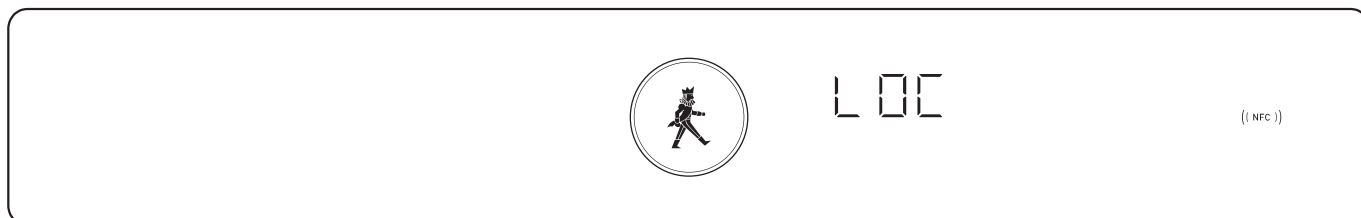

Upgrading: When the firmware is upgrading, the display panel flashes “UP” and the equipment cannot start. Wait until the upgrade is complete and the message disappears.

Caution: Do not power off when the equipment is upgrading.

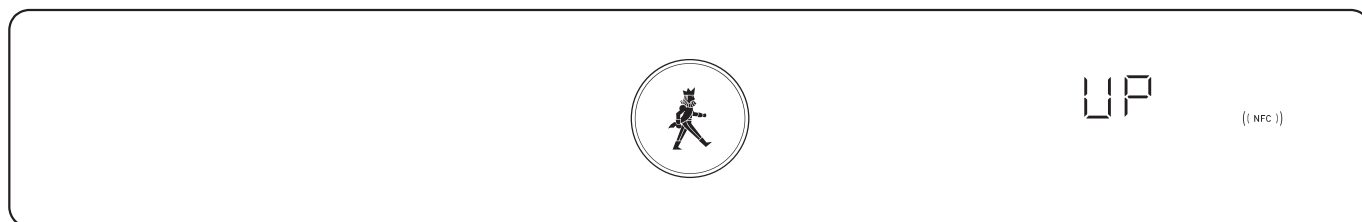

Heart Rate: The heart rate indicator stays on when the KS Fit app is connected to your Apple Watch, and turns off when not connected.




Connected



Unconnected


② Program Settings

Power On: Turn on the power switch to wake the equipment until the four windows shows 00:00.

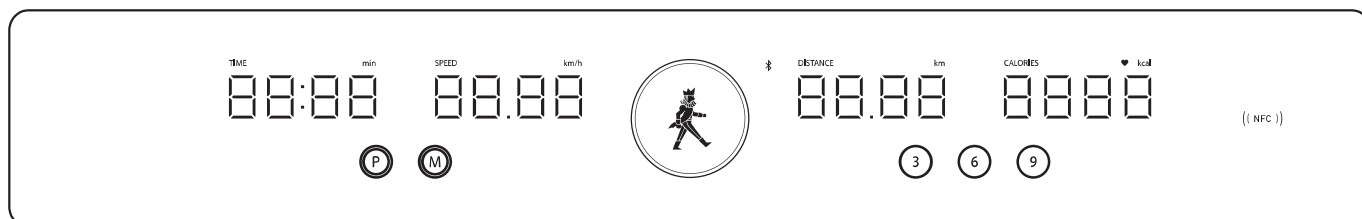

Default Programs (P01-P11):

- Continuously press the “P” button to cycle through default programs (P01-P11) ;

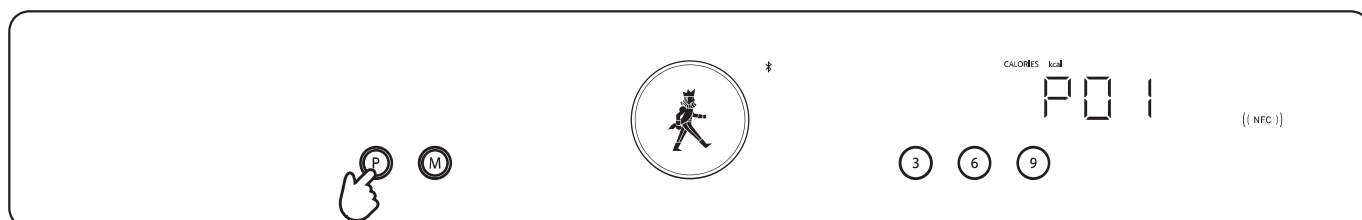

- Press the SPEED DIAL to choose a workout program based on the time and speed illustrated below and start exercising.


P01 Fragment Walk			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
15	3	4	2.5
	3	6	3.5
	3	5	3
	3	6	3.5
	3	4	2.5
P02 Morning Walk			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
20	4	4	2.5
	4	5	3
	4	6	3.5
	4	5	3
	4	4	2.5
P03 Noon Walk			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
30	4	4	2.5
	7	5	3
	6	6	3.5
	2	7	4.5
	7	5	3
	4	4	2.5
P04 After-Dinner Walk			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
40	4	4	2.5
	10	5	3
	18	6	3.5
	19	7	4.5
	27	6	3.5
	28	7	4.5
	36	6	3.5
	40	4	2.5

P05 30-Min Brisk Walk			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
30	3	4	2.5
	2	5	3
	4	6	3.5
	2	7	4.5
	4	6	3.5
	2	7	4.5
	4	6	3.5
	2	7	4.5
	4	6	3.5
	3	4	2.5
P06 Entry-Level Run			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
15	2	4	2.5
	2	6	3.5
	5	7	4.5
	2	8	5.0
	2	6	3.5
	2	4	2.5
P07 15-Min Easy Workout			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
15	2	5	3.0
	2	7	4.5
	5	8	5.0
	2	9	5.5
	2	10	6.0
	2	5	3.0
P08 30-Min Relaxing Jog			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
30	2	4	2.5
	3	6	3.5
	5	7	4.5
	4	8	5.0
	2	7	4.5
	4	8	5.0
	5	7	4.5
	3	6	3.5
	2	4	2.5

P09 30-Min Vigorous Run			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
30	2	4	2.5
	3	6	3.5
	5	8	5.0
	10	10	6.0
	10	6	3.5
P10 45-Min Challenging Run			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
45	2	4	2.5
	2	6	3.5
	6	7	4.5
	2	9	5.5
	8	8	5.0
	2	9	5.5
	6	7	4.5
	2	9	5.5
	8	8	5.0
	2	9	5.5
	3	6	3.5
	2	4	2.5
P11 45-Min Sweat Shred			
Total Duration (min)	Stage (min)	Speed (km/h)	Speed (mph)
45	5	6	3.5
	25	8	5.0
	10	10	6.0
	5	6	3.5

Customized Programs(U01-U03):


- Continuously press the "P" button to cycle through the customized programs (U01-U03);

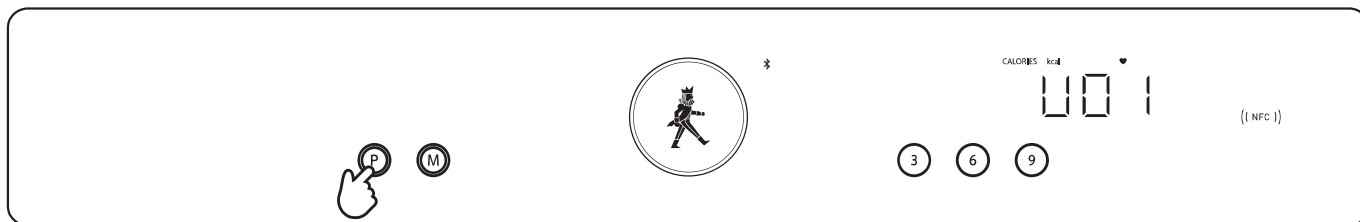


- Rotate the SPEED DIAL to set the total workout duration (10 min by default, 5 - 99 min available);

Caution: The total duration will be split into 10 Stages automatically.

- Press the "M" button to enter Speed settings (1 km/h by default);
- Rotate the SPEED DIAL or press the Quick Speed Keys to set the speed for the first workout Stage;
- Tap the "M" button to confirm the speed;
- Set other speed levels for the next 9 workout Stages in the same way.

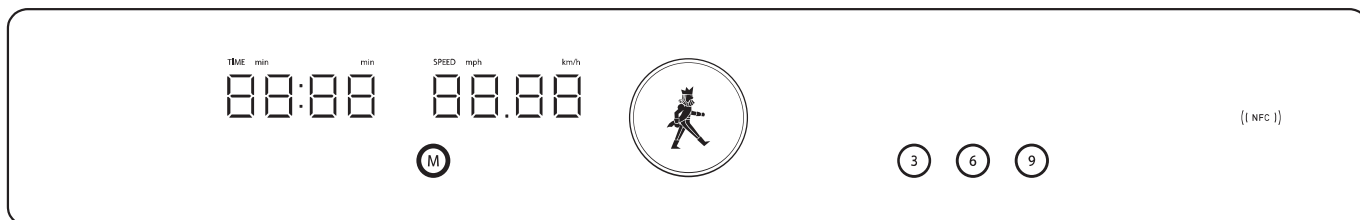

- **Run:** Press the SPEED DIAL to start exercising.

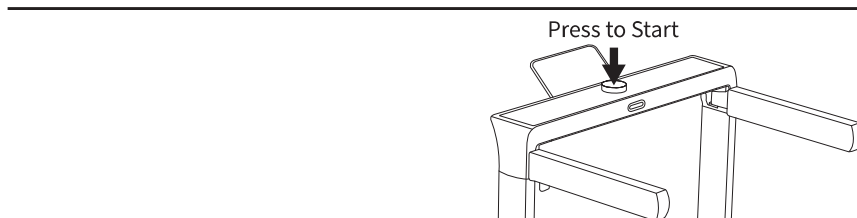

- **Speed Adjustment:** Workout speed varies by Stage indicated by a beep. Within each Stage, speed dial or quick speed keys are available to adjust speed, but it will automatically reset to the default value at the start of the next Stage.
- **End Workout:** Upon finishing all the Stages, the equipment will emit 6 beeps, slow down to a stop, show "End" and enter Wake mode after 5 seconds.

③ Mode Settings


- Continuously press “M” button after powering on to choose preferred menu such as Time, Distance or Calories;

- Rotate the SPEED DIAL to set workout time (5-99 min), distance (0.5-99.99 km) or calories (10-999 cal);

Caution: The default time, distance and calories are 15 min, 1 km and 50 calories respectively.

- Press the SPEED DIAL to start exercising. The equipment will enter countdown mode.

Caution: Speed Adjustment and End Workout operations follow the same procedures as Program settings.

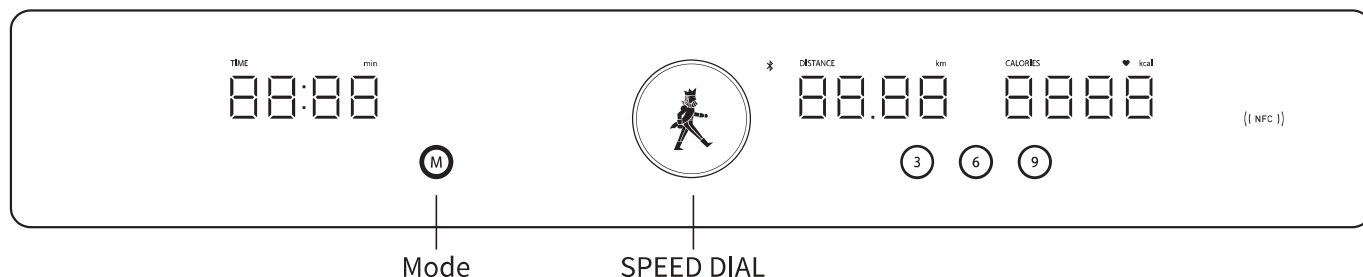

08 How to connect the app


Elevate your workout experience with the KS Fit app. Real-time data tracking and personalized guidance help you reach your fitness goals faster.



- ① Scan the QR code, download and install the KS Fit app.
- ② Bring your mobile phone close to the equipment.
- ③ Turn on Bluetooth on your phone (allow it to search for nearby devices) while turning on the switch on your equipment.
- ④ Open the KS Fit app and add your equipment.


Caution:

- The equipment can only be added through the KS Fit app. If you've already connected it via Bluetooth settings, please remove it and add it again using the app.
- In case pairing fails, turn off the equipment, wait for 10 seconds and repeat step ② to ④.
- For safety, avoid connecting another phone to the equipment while it is in use.

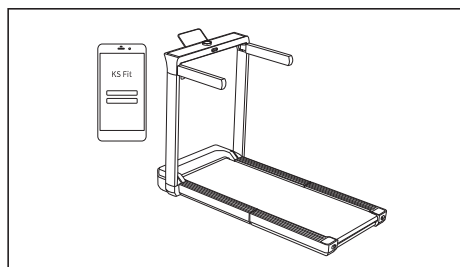


09 How to fold the treadmill

For your safety and to prevent damage to the equipment, always turn off the equipment and unplug both ends of the power cord before folding.

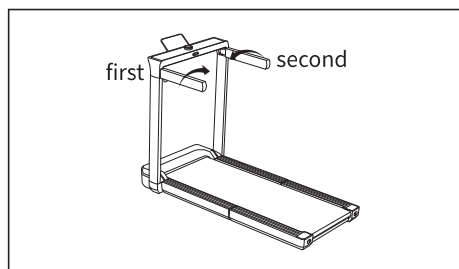


- ① Fold the left handle by pressing and holding the left release button, followed by the right handle.


Caution: The left handle must be folded prior to folding the right handle.

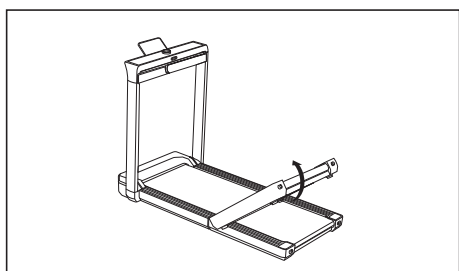

- ② Lift the rear running board until it is completely folded.

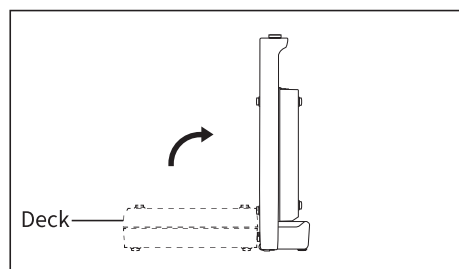

- ③ Fold the deck by holding the release handle and lifting it up until the equipment is completely folded.

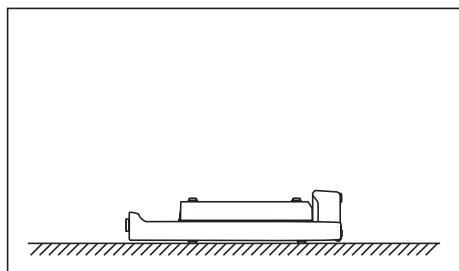


- ④ Move the equipment to your desired spot and store it flat on a solid level surface.

Caution:

- Do not operate a folded equipment.
- Store the power cord properly for next use.

3. Care and Maintenance

For optimal performance and longevity, perform regular maintenance on your equipment from the following aspects. If you discover any damage or wear, stop using the equipment immediately and contact customer service or a qualified technician for repairs.

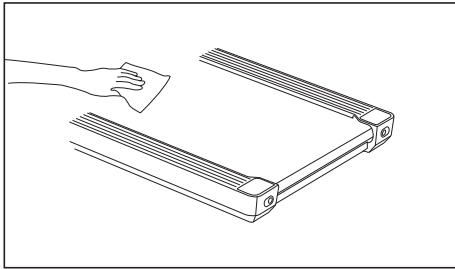


① Clean the equipment

- Power off the equipment and unplug the power cord.
- Add a small quantity of mild cleaner to a 100% cotton cloth, and wipe down the display panel, running belt, handrail, etc.

Caution:


- Do not spray the cleaner directly on the display panel or running belt.
- Do not use acidic or corrosive cleaner.
- Do not wipe under the running belt.
- After a period of exercise, dust and stains may appear on the belt and on the floor behind the equipment. This is normal and can be simply wiped clean.

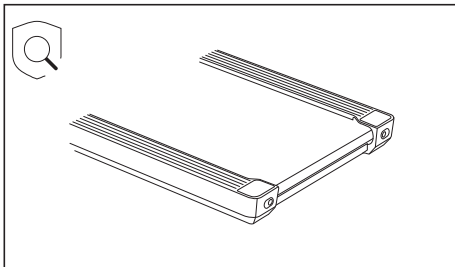

② Check the equipment

- Check the power cord. If any damage and wear is found, stop using it and replace the power cord immediately.
- Check the running belt. If it is not centered, too tight or too loose, adjust the running belt (see P.18_Troubleshooting_“③ Symptom”).

Caution: If any replacement is needed, use the components designated by the manufacturer.

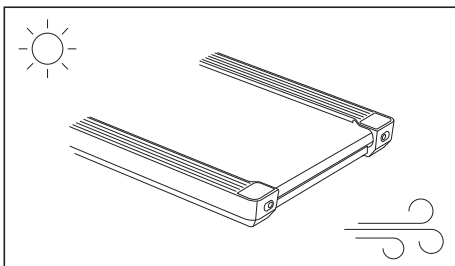


③ Keep cool and dry

- Keep the equipment in a cool and dry condition.
- Caution:** Do not use the equipment outdoors or in areas of high humidity or extreme temperature changes.
- Allow the equipment to cool down for 20 minutes after 2 hours of use.


Caution: Do not use the equipment continuously for more than 2 hours.

4. Troubleshooting

Most malfunctions can be solved by the following steps. If any issues are found during use, stop using the equipment immediately and try to solve them as instructed below.

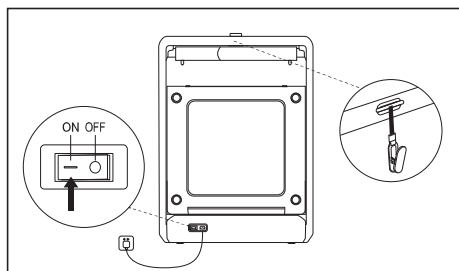


- ① Symptom: The power cannot be turned on / The power is off during use
- Ensure both ends of the power cord are plugged in.
 - Make sure the power switch is turned on.

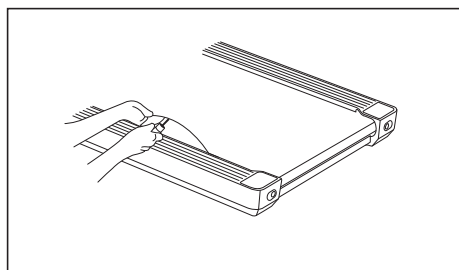

- ② Symptom: The running belt is noisy and moves unevenly
- Power off the equipment and unplug both ends of the power cord.
 - Gently lift up the rear running board, raise the running belt, and apply the silicone oil in a “Z” shape at the center of the running board.
 - Power on the equipment and try again.

Caution:

- Silicone oil doesn't need to be applied on the entire running board as it will naturally spread during use.
- 5-10 ml of silicone oil is required for each lubrication. Excess may cause slipping.

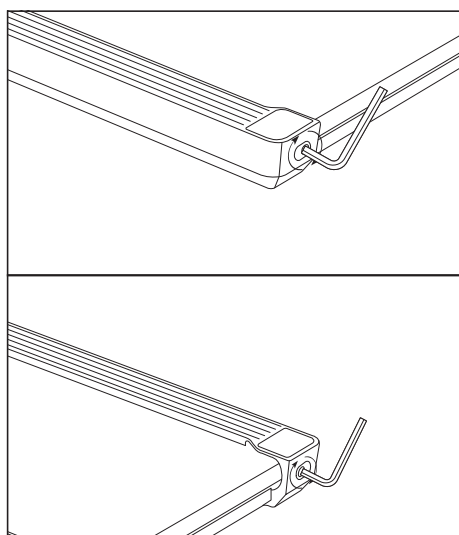

- ③ Symptom: Running belt is off center or slipping
- Note:** There are two gaps on the left and right sides of the plastic shell at the front of the running belt. The running belt should be kept running in the center position. When the running belt is offset to the left or right side of the white mark on the edge, it should stop the movement and adjust the running to the center position.
- When the running belt is off center:
Gently lift the rear running board and adjust the running belt manually (see P05 “How to unfold the treadmill”_Step ③).
 - If the running belt still deviates, adjust it with the Allen Key supplied by the following steps:
 - a. Running belt goes to the left: turn the left adjustment hole screw clockwise by 1/4 turn.
 - b. Running belt goes to the right: turn the right adjustment hole screw clockwise by 1/4 turn.
 - c. Running belt is slipping: turn the left and right adjustment hole screws clockwise for 1/2 turn at the same time.
- After each adjustment, run the equipment at a speed of 3-4 km/h (1.95-2.5 mph) for 1-2 minutes to verify adjustment. Repeat adjustments if needed.
- Caution:** If the running belt is too tight or too loose, it will affect the performance of the equipment and damage the running belt.

④ Error code description

In case of a malfunction, the display panel will show an error code as below. Turn off and restart the equipment to see if the error code disappears. If it still persists, contact the customer service for assistance. Be sure to have your product model and serial number ready which can be found on the nameplate (see cover).

E01 Software overcurrent
E02 Hardware overcurrent
E03 IPM module overheating
E04 Undervoltage protection
E05 Overvoltage protection
E06 Motor phase loss protection
E07 Motor locked-rotor protection

E09 Motor unable to start
E12 Motor overcurrent protection
E13 Overload protection
E14 Hall signal missing
E15 Communication fault
E16 Module connection error

5. Exercise Tips

Exercise Intensity

Whether your goal is to burn fat or improve cardiovascular fitness, exercising at the appropriate intensity is key to achieving results. You can use your heart rate as a guide to find the right intensity level. The table shows recommended heart rate zones for fat burning and cardiovascular fitness, for reference purposes only.

165	155	145	140	130	125	115	🏡
145	138	130	125	118	110	103	🏡
125	120	115	110	105	95	90	🏡
20	30	40	50	60	70	80	Age

To find the appropriate intensity level, locate your age at the bottom of the chart (rounding to the nearest ten). The lowest number is the fat-burning heart rate, the middle number is the maximum fat-burning heart rate, and the highest number is the heart rate for improving cardiovascular fitness (it is recommended to wear a heart rate monitor during exercise to ensure efficiency, which requires additional purchase).

Burning Fat - To effectively use fat as an energy source, you must engage in low-intensity exercise for a sustained period of time. During the first few minutes of exercise, your body will use glycogen as energy. Only after the initial few minutes of exercise does your body begin to use stored fat as energy. If your goal is to burn fat, adjust your exercise intensity until your heart rate is close to the lowest value in your training zone.

Exercise Guide

Before engaging in exercise be sure to consult your doctor.

Warm-up: It is recommended to warm up for 5-10 minutes before exercising, fully mobilizing joints and stretching before starting low-intensity exercise.

Exercise: It is recommended to exercise for 20-30 minutes, maintaining exercise intensity within the training range (during the first few weeks of training, exercise time should be kept within 20 minutes), and breathing should be kept even during exercise.

Cool-down: It is recommended to stretch for 5-10 minutes after exercising, which can improve joint flexibility and muscle extensibility, and prevent exercise injuries.

Exercise Frequency

To maintain or improve your physical condition, complete three training sessions per week with at least one day of rest between each session. After several months of regular exercise, if necessary, you can complete up to five sessions per week. Remember, the key to success is to make exercise a frequent and enjoyable part of your daily life.

6. Trademark and Legal Declaration

Various patents relating to the Kingsmith WalkingPad Treadmill series are developed and copyrighted by Beijing Kingsmith Technology Co., Ltd. ("Kingsmith" for short). Without the written permission of Kingsmith, any organization or individual shall not copy or distribute all or any part of this User Manual and shall not use the patents contained thereof. This User Manual, as far as possible, has included various latest function introductions and operational instructions at the time of being printed.

Nevertheless, there might be discrepancies between the purchased Treadmill and those described herein due to a continuous optimization in functions and designs. Therefore, the actual Treadmill shall prevail in case of any deviations in color and appearance.

7. Regulatory Compliance Information

WEEE Disposal and Recycling Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

EU Declaration of Conformity



Hereby, Beijing Kingsmith Technology Co., Ltd. declares that the radio equipment type [WP500B4] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://de.walkingpad.com/pages/weitere-informationen>

UKCA Declaration of Conformity



Hereby, Beijing Kingsmith Technology Co.,Ltd. declares that the radio equipment type [WP500B4] is in compliance with Radio Equipment Regulations 2017. The full text of the UKCA declaration of conformity is available at the following internet address: <https://uk.walkingpad.com/pages/other-information>

UKCA PSTI Statements of Compliance

Hereby, Beijing Kingsmith Technology Co.,Ltd. declares that the radio equipment type [WP500B4] is in compliance with The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. The full text of the PSTI declaration of conformity is available at the following internet address: <https://uk.walkingpad.com/pages/other-information>