


KINGSMITH WalkingPad Treadmill

G2 Plus

USER MANUAL

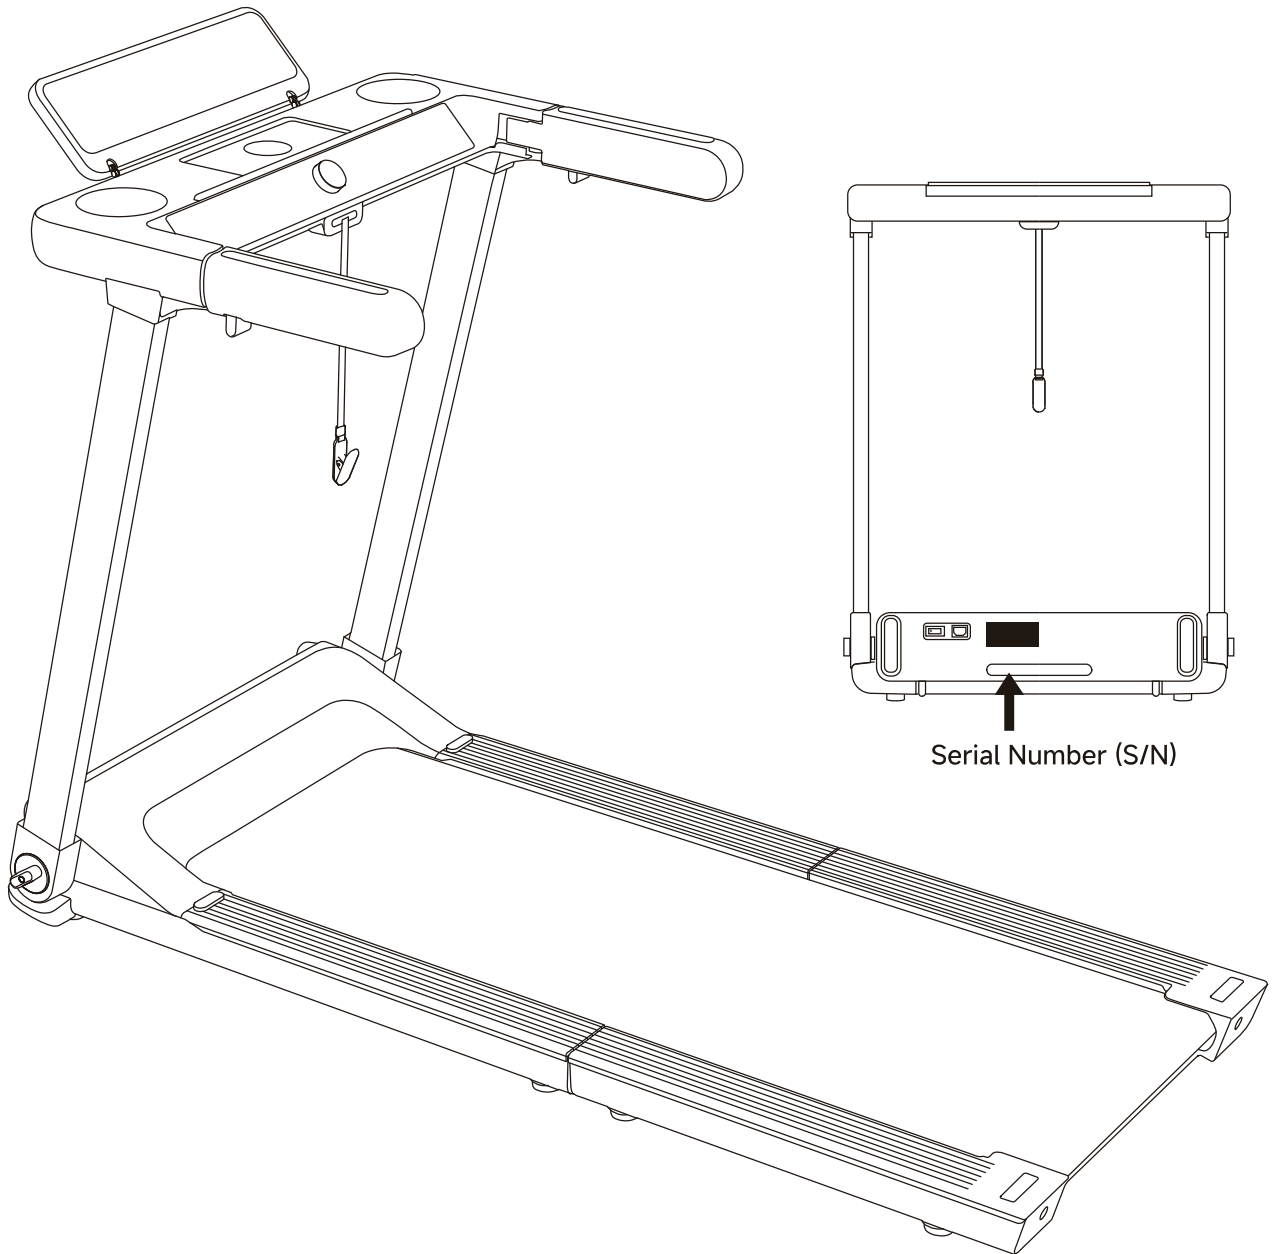

WARNING

Please be careful to avoid slipping and injury when using.
Do not let children approach or use this equipment.
Mind your hands and fingers when using and operating the product.
Please read the user manual carefully before using the product. Save these instructions and retain for future reference.



Scan for
multi-language
e-manual



Scan to
download our
app

IMPORTANT SAFEGUARDS

- 1) This equipment can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the equipment in a safe way and understand the hazards involved. Children shall not play with the equipment. Cleaning and user maintenance shall not be made by children without supervision.
- 2) This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the equipment by a person responsible for their safety. Children should be supervised to ensure that they do not play with the equipment.
- 3) Do not use outdoors.
- 4) The equipment is intended for consumer and residential use only. Do not use it in a commercial or light-commercial setting or outdoors or for medical treatment purpose.
- 5) Do not exceed the maximum specified user weight (see Tech Specs).
- 6) Set up and operate the equipment on a solid level surface. Ensure there are no obstructions underneath it.
- 7) Ensure there is a distance of at least 2000 mm × 1000 mm (78.7 in × 39.4 in) behind the equipment and a distance of at least 600 mm (23.62 in) on both sides.
- 8) Injuries to health may result from incorrect or excessive training.
- 9) If you feel uncomfortable, please stop exercising immediately and consult a doctor to avoid damage to your health.
- 10) Heart rate monitoring systems may be inaccurate. Over-exercising may result in serious injury or death. If you feel faint stop exercising immediately.
- 11) Do not start the equipment when it is folded.
- 12) The safety level of the equipment can be maintained only if it's examined regularly for damage and repaired.
- 13) Replace defective components immediately and/or keep the equipment out of use until repair.
- 14) Pay special attention to components that are most susceptible to wear, such as the belt and motor. These components should be inspected more frequently and replaced when necessary.
- 15) Users aged 60 years and above, children, and pregnant women Must use this product cautiously and be supervised by adults. Please consult a doctor and obtain relevant guidance before using this equipment.

1. Product Introduction

01 Accessories



Safety key



Power cord



Allen key



Silicone oil



User manual

02 Tech Specs

Product name	Motorized Treadmill	Net weight	41.5 kg / 91.5 lb
Model	WP460J5	Belt size	1200 mm × 460 mm 47.2 in × 18 in
Rated voltage	220-240 V~	Unfolded size	1481 mm × 722 mm × 971 mm 58.3 in × 28.4 in × 38.2 in
Rated frequency	50/60 Hz	Folded size	996 mm × 722 mm × 302 mm 39.2 in × 28.4 in × 11.9 in
Rated power	750 W	Class	HC
Speed range	1-14 km/h 1-8.5 mph	Age range	14 years and above
Max user weight	136 kg / 300 lb		

Energy Efficiency

This product has standby mode and off mode.


Power consumption	off mode: 0 W standby mode: 0.4 W
Time to enter the Condition	standby mode: 10 min

Radio Frequency and Radio Transmission Power

RF Specification	Working Frequency	Maximum Output Power
Bluetooth	2402-2480 MHz	1.23 dBm (EIRP)


Noise emission under load is higher than without load. The value of the A-weighted emission sound pressure level at the trainer's ear is around 60 dB(A).

03 Display Panel

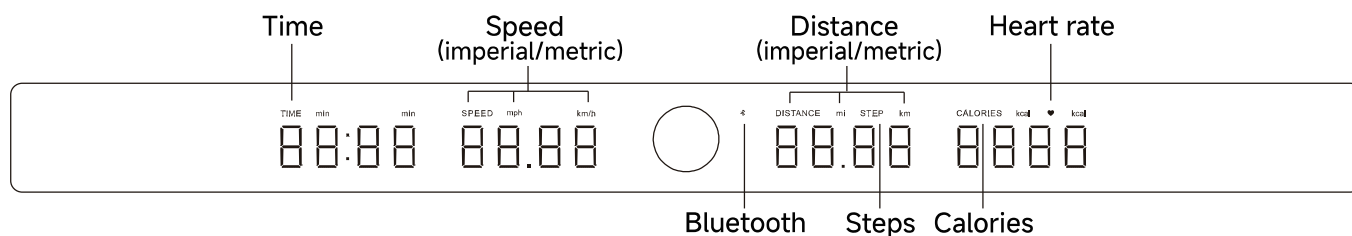


Display	Status	Meaning
88.88	Appear	The safety key is not inserted. Insert the safety key to start the treadmill
88.88		The child lock is enabled. Disable it in the app to use the treadmill
88.88		The treadmill is upgrading. Do not power off until it is complete
88.88		The belt is slowing down to a stop. When it stops, the icon disappears
88.88		The workout has ended. Workout data is reset if the KS Fit app is not connected
♥	The heart rate indicator alternately displays with the calorie indicator	The KS Fit app is connected to both the treadmill and your Apple Watch
♥	Off	Not connected
⌘	Solid	The treadmill is connected to the KS Fit app
	Flashing	Not connected

04 Part Names

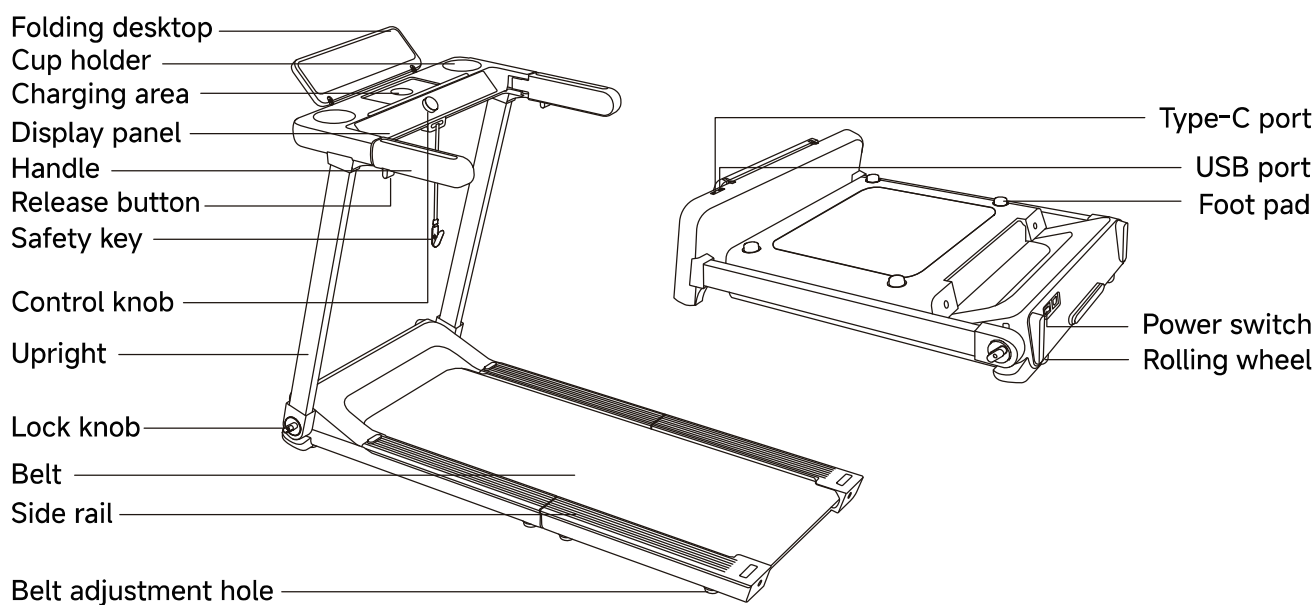

2. Operation and Adjustment


01 Moving the Treadmill

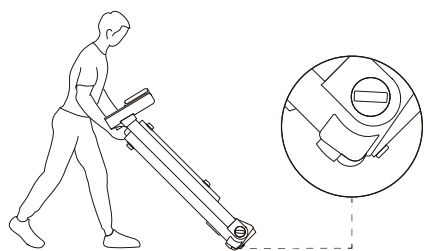

Before moving, ensure the power cord is unplugged and confirm the handles, desktop and deck are fully folded.


- Raise the rear end of the equipment until the front wheels touch the floor.
- Move the equipment to a spacious area.
- Set up and operate the equipment on a solid level surface. Ensure there are no obstructions underneath it.
- Avoid placing the equipment on thick and soft carpet or mats, as these may cause instability or affect performance.

02 Unfolding the Treadmill

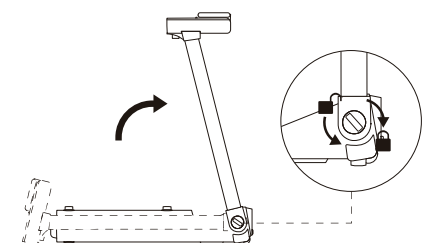


Before unfolding the equipment, please ensure the free area behind the equipment is at least 2000 mm × 1000 mm (78.7 in. × 39.4 in.) and the free area on each side is at least 600 mm (23.62 in.).

- Loosen both lock knobs counterclockwise.
- Raise the upright until completely vertical, hold it firmly and lock both knobs clockwise.

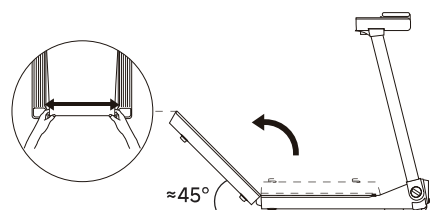

- Unfold the deck to approximately 45 degrees.
- Manually adjust the belt until it is centered.
- Gently lower the deck to the floor.

Note: If the deck is not flat, rotate the foot pad to level it. Turn clockwise to lower the foot pad or counterclockwise to raise it.

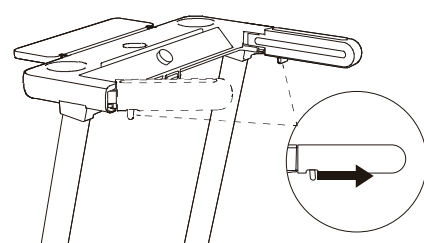


- Press and hold both release buttons toward you to unfold the handles.
- Unfold the desktop to the desired angle: 110°–150° for phone/iPad, or 180° for laptop.

Note:

- Do not over-extend to prevent device slippage.
- To narrow the holder's angle within this range (150°→110°), you must first fold it to 0°, then unfold it to your desired angle.

03 Inserting the Safety Key

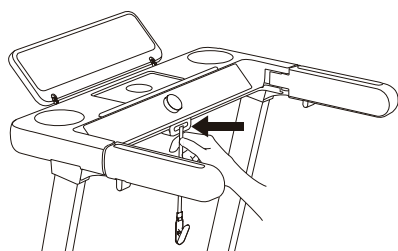


- Insert the safety key before starting the treadmill.
- Attach the pull cord to your clothing at the waist during workout.

Warning:

- In an emergency, pull out the safety key to stop the treadmill. Hold handles firmly and step onto the side rails until the belt stops.
- Exercise caution when removing the safety key, as the equipment will stop suddenly.
- Remove the safety key when not in use, and store out of reach of children.

04 Connecting the Power Cord and Powering on

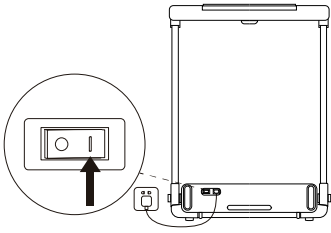


Before plugging in the power cord, ensure the plug fits the outlet and the outlet is properly grounded.

- Plug the power cord into the equipment and then into the outlet.
- Turn on the power switch. The display lights up and beeps.

Caution:

- Do not modify the plug provided with the product.
- Only manufacturer-supplied components shall be used to maintain/repair the equipment.

05 Downloading the KS Fit App and Adding the Equipment

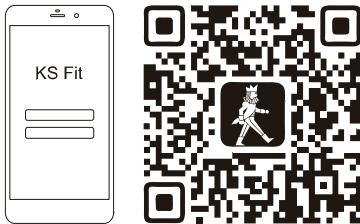


- Scan the QR code to download or update the KS Fit app.
- Power on the equipment and enable Bluetooth on your phone.
- Open the KS Fit app and follow the prompts to add the equipment.

Caution:

- For safety, do not connect a second phone while the equipment is in use.
- If the unit switch (metric/imperial) needs to be changed, tap Me > Settings > Unit Settings > Metric or Imperial, then restart the equipment.

06 Starting Workout

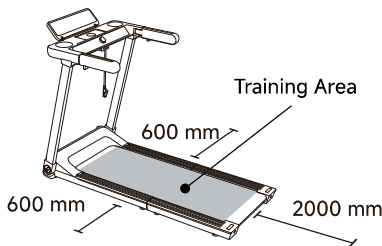

During workout, do not wear loose or dangling clothing. Care should be used when mounting or dismounting the equipment.

- Step on the equipment and press **Control Knob**.
- The belt starts moving at 1 km/h (1 mph).

Note: For safety, the belt will automatically stop after 60 seconds when no user is on the equipment. This **No-Load Stop** feature is off by default but can be turned on in the KS Fit app (Motion > Settings).

07 Adjusting Speed (when the belt is moving)

Fine Adjustment:

- Rotate the Control Knob slowly clockwise to increase speed.
- Rotate the Control Knob slowly counterclockwise to reduce speed.


Note: Each fine rotation of the Control Knob adjusts the speed by 0.1 km/h (0.1 mph).

Quick Speed Adjustment:

- Rotate the Control Knob quickly clockwise to increase speed to preset levels: 1/3/6/9/12/14 km/h (1/3/6/8.5 mph).
- Rotate the Control Knob quickly counterclockwise to reduce speed in reverse order: 14/12/9/6/3/1 km/h (8.5/6/3/1 mph).

Caution: Beginners should not set the speed to the maximum due to increased risk of injuries.

08 Pausing Workout (when the belt is moving)

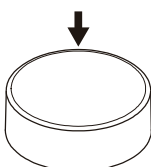


- Press **Control Knob**. The belt slows down. The display shows “STOP” until the belt stops moving completely. Workout data is automatically saved.

Note:


- To resume workout, press the Control Knob again.
- In an emergency, pull out the safety key to stop the equipment, hold the handles firmly and step on the side rails until the equipment comes to a complete stop.

09 Ending Workout (after pausing workout)

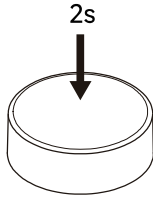

- Press **Control Knob** for 2 seconds.
- Alternatively, leave the equipment idle for 10 minutes.
- The workout data is reset. If the KS Fit app is connected, the data will be synced and uploaded there.


10 Entering Sleep Mode (after ending workout)

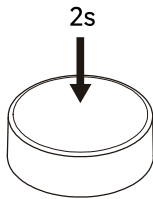

- Press **Control Knob** for 2 seconds.
- Alternatively, leave the equipment idle for 10 minutes.
- The display turns off and the equipment enters sleep mode.


Note: To wake up the equipment, press the Control Knob on the display panel.

11 Folding and Storing the Equipment

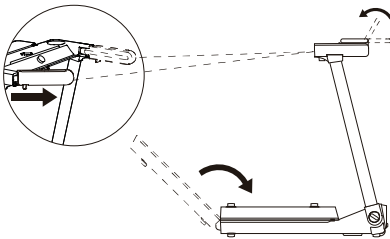


Before folding, allow the running surface to come to a complete stop.

- Press and hold both release buttons toward you to fold the handles.
- Fold the desktop flat.
- Fold the deck.

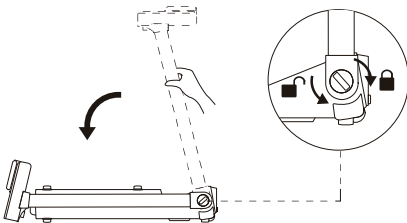

- Hold the upright firmly, then loosen both lock knobs counterclockwise.
- Lower the upright slowly until it lies flat.
- Tighten both knobs clockwise.



- Move the equipment to a safe area and lay it flat on a solid level surface for storage.
- Store the power cord and safety key for next use.

Caution: Do not operate a folded equipment.


3. Exercise Tips

Inspect the equipment for incorrect, worn, or loose components and then correct, replace, or tighten prior to use. A complete visual inspection, and test of the features and functions of the equipment should be made prior to use. Read, understand, and test the emergency stop procedures before use. Obtain a medical exam before beginning any exercise program. If at any time during exercise you feel faint, dizzy, or experience pain, stop and consult your physician. Do not operate electrically powered equipment in damp or wet locations.

To ensure safe and effective training, follow these biomechanical positioning guidelines when using the equipment: Stand with feet shoulder-width apart, knees slightly bent. Keep your torso upright, head facing forward, shoulders relaxed. Core muscles engaged, pelvis in neutral position.

4. Maintenance and Troubleshooting


Disconnect all power before servicing the equipment. The safety level of the equipment can be maintained only if it's examined regularly for damage and repaired. Replace defective components immediately and/or keep the equipment out of use until repair. Only manufacturer-supplied components shall be used to maintain/repair the equipment.

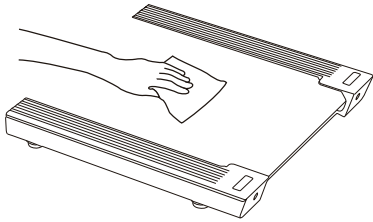

Daily Cleaning

- Wipe the surface of the equipment with a soft, damp cloth.
- Keep the equipment clean and dry.

Note: Do not use acidic, corrosive, abrasive, or chemical cleaners, as they may damage the surface or components.

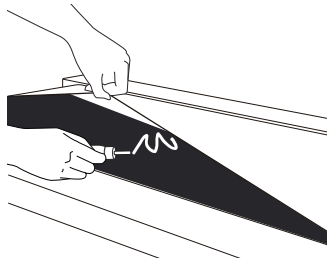


Belt Lubrication

Symptom: The belt is noisy and moves unevenly.

Solution:

- Lubricate the belt every 3–6 months.
- Lift the belt from the right side and apply silicone oil (5–10mL) on the deck in a “Z” shape.
- Power on and run the belt to spread the oil.

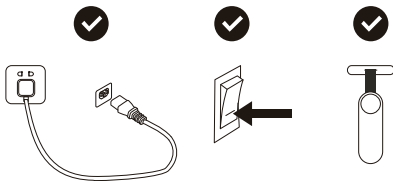

Power Failure

Symptom: The equipment fails to power on or shuts off suddenly.

Solution:

- Ensure both ends of the power cord are plugged in.
- Ensure the power switch is turned on.
- Ensure the safety key is inserted.




Error Code

If an error code appears on the display, immediately turn off the equipment and contact customer service.

Belt Adjustment

Keep the belt centered between the reference lines on the frame during use. If the belt shifts past the lines, stop the equipment immediately and adjust the belt until it is centered.

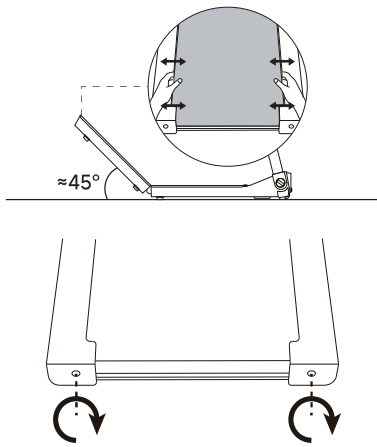

Method A: Manual adjustment (recommended):

- Raise the deck to approximately 45 degrees, and center the belt manually. The gap on the left and right should be approximately equal.
- Lower the deck completely to the floor without altering the position of the belt.

Method B: Allen key adjustment (if Method A fails):

- When the belt goes to the left:

Insert the Allen key into the left belt adjustment hole and turn clockwise by 1/4 turn.

- When the belt goes to the right:

Insert the Allen key into the right belt adjustment hole and turn clockwise by 1/4 turn.

- When the belt is slipping:

Insert the Allen key into one belt adjustment hole at a time and turn clockwise by 1/2 turn on each side. Ensure it is neither too tight nor too loose. Ensure it is neither too tight nor too loose.

Verification: Power on, run the belt at 3-4 km/h (2-2.5 mph) for 1-2 minutes and observe the operation. Repeat the adjustment if the belt is still off-center.

5. Regulatory Compliance Information

WEEE Disposal and Recycling Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

EU Declaration of Conformity



Hereby, Beijing Kingsmith Technology Co., Ltd. declares that the radio equipment type [WP460J5] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://de.walkingpad.com/pages/weitere-informationen>

UKCA Declaration of Conformity



Hereby, Beijing Kingsmith Technology Co.,Ltd. declares that the radio equipment type [WP460J5] is in compliance with Radio Equipment Regulations 2017. The full text of the UKCA declaration of conformity is available at the following internet address: <https://uk.walkingpad.com/pages/other-information>

UKCA PSTI Statements of Compliance

Hereby, Beijing Kingsmith Technology Co.,Ltd. declares that the radio equipment type [WP460J5] is in compliance with The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. The full text of the PSTI declaration of conformity is available at the following internet address: <https://uk.walkingpad.com/pages/other-information>



Manufacturer: Beijing Kingsmith Technology Co., Ltd.
Address: Floor 4, Building 25, Area 18, ABP Park, Fengtai, Beijing, China
MADE IN CHINA

Customer service
eu.support@kingsmith.com
eu.contact@walkingpad.com

V1.1